



WINDER REKLAMOWY L

INSTRUKCJA UŻYTKOWANIA MASZTU MODUŁOWEGO WRAZ Z FLAGĄ

ELEMENTY I SPOSÓB MONTAŻU MASZTU

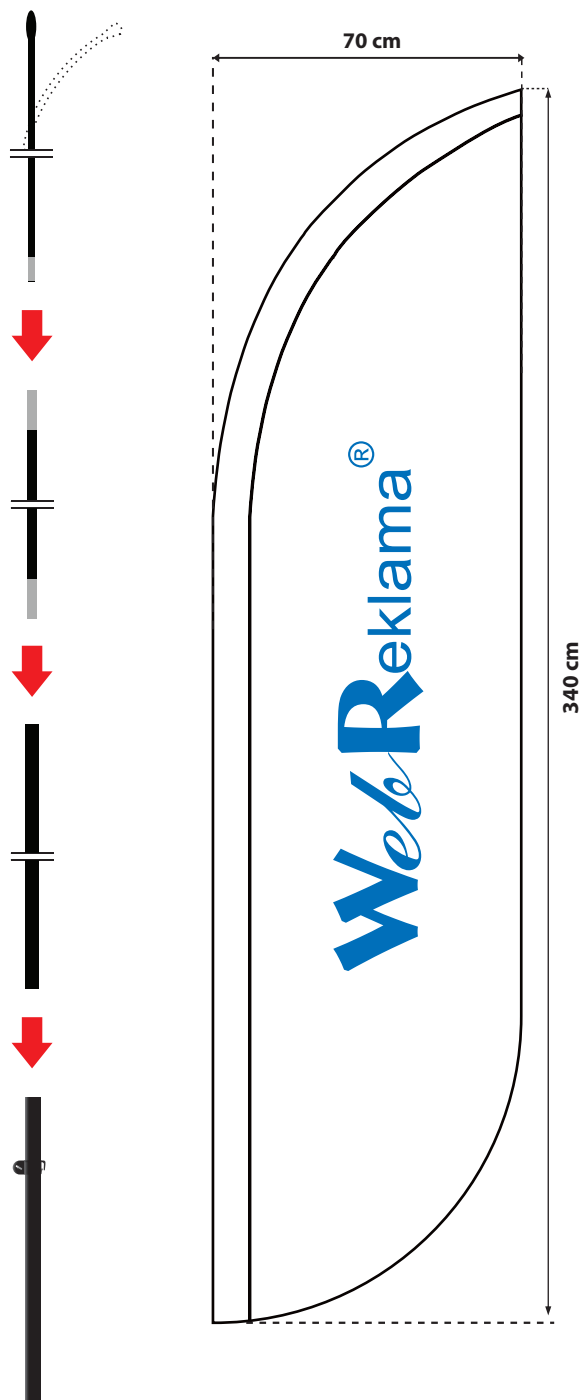

WIDOK PO ZŁOŻENIU WINDERA

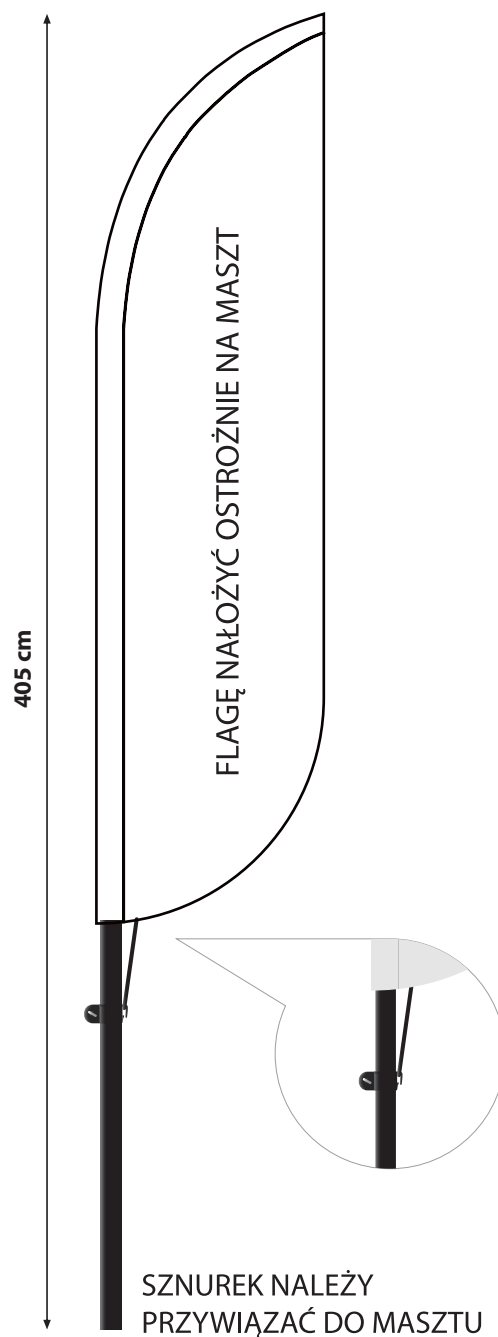

WARUNKI UŻYTKOWANIA MASZTU

Maszty należy zamocować w odpowiedniej podstawie (w zależności od podłoża) stałej lub przenośnej tak, aby umożliwić swobodny obrót flagi pod wpływem działania wiatru.

Flagi nie należy eksponować na maszcie przy wietrze większym niż 50km/h.

WARUNKI KONSERWACJI FLAGI



100% POLIESTER

WARUNKI UŻYTKOWANIA I KONSERWACJI FLAG

- Trwałość flag może ulegać zmianie pod wpływem silnych wiatrów, miejsca ekspozycji oraz zanieczyszczeń atmosferycznych, zwłaszcza spalin. Należy pamiętać o dbaniu o konserwację wydruków zarówno podczas ekspozycji, jak i przechowywania.
- Intensywny deszcz i wiatr mogą powodować zwiększenia ryzyka uszkodzenia flagi. Po nasiąknięciu wilgocią, materiał jest cięższy, co może zwiększać obciążenie masztu oraz przyspieszać zużycie. Silny wiatr szarpiący materiałem może powodować rozdarcia i przetarcia, dlatego zalecamy zdejmowanie flag z ekspozycji przy wietrze przekraczającym 50 km/h.
- Uczulamy, że flaga musi mieć możliwość swobodnego obracania się na wietrze bez uderzania o maszt lub inne obiekty w pobliżu w celu uniknięcia uszkodzeń. Jakiegokolwiek uszkodzenia materiału powstałe w ten sposób należy jak najszybciej naprawić. Nieuniknionym jest zabrudzenie flagi powstałe w wyniku zanieczyszczeń atmosferycznych, a przede wszystkim spalin samochodowych. Flagi należy wyczyścić zaraz po zabrudzeniu, by uniknąć wsiąknięcia substancji w materiał. Zalecamy także okresowe pranie flag w temperaturze do 40°C z użyciem niewielkiej ilości tradycyjnych środków czyszczących niezawierających chloru.
- Flagi do winderów powinny być przechowywane w suchym miejscu w momentach kiedy nie znajdują się na ekspozycji. Jeżeli flagi zawilgotnieją, należy je dokładnie wysuszyć przed przechowywaniem.

BEZPIECZEŃSTWO, ZGODNOŚĆ I OSTRZEŻENIA


Ostrzeżenia dotyczące bezpieczeństwa produktów reklamy zewnętrznej zgodnie z wymaganiami Rozporządzenia (UE) 2023/988 (GPSR):

- Upewnij się, że produkt jest prawidłowo zamocowany i odporny na działanie warunków atmosferycznych.
- Regularnie kontroluj stan konstrukcji oraz elementów mocujących.
- Upewnij się, że produkt nie posiada ostrych krawędzi ani wystających elementów. W razie potrzeby zabezpiecz miejsca mogące stwarzać ryzyko skaleczenia.
- Nie montuj produktu w sposób ograniczający widoczność znaków drogowych lub innych elementów infrastruktury.
- Montaż oraz demontaż powinny być wykonywane przez osoby posiadające odpowiednie kwalifikacje i doświadczenie w tego typu pracach.
- Regularnie czyść produkt i przeprowadzaj jego przeglądy techniczne. Konstrukcja powinna być regularnie kontrolowana pod kątem korozji, luzów w łączeniach oraz stabilności.
- Umieszczaj produkt wyłącznie w miejscach bezpiecznych dla pieszych i pojazdów.
- Unikaj lokalizacji mogących negatywnie wpływać na bezpieczeństwo otoczenia.
- W przypadku ekstremalnych zjawisk atmosferycznych (np. huragany, silne burze), zaleca się tymczasowy demontaż lub zabezpieczenie wolnostojących elementów reklamy zewnętrznej.
- Produkt nie jest zabawką. Elementy montażowe, szpile gruntu oraz plastikowe opakowania należy trzymać poza zasięgiem dzieci (ryzyko skaleczenia lub uduszenia).


BEACHFLAG L

ASSEMBLY AND CARE MANUAL FOR A MODULAR FLAGPOLE

INDIVIDUAL PIECES AND ASSEMBLY GUIDE

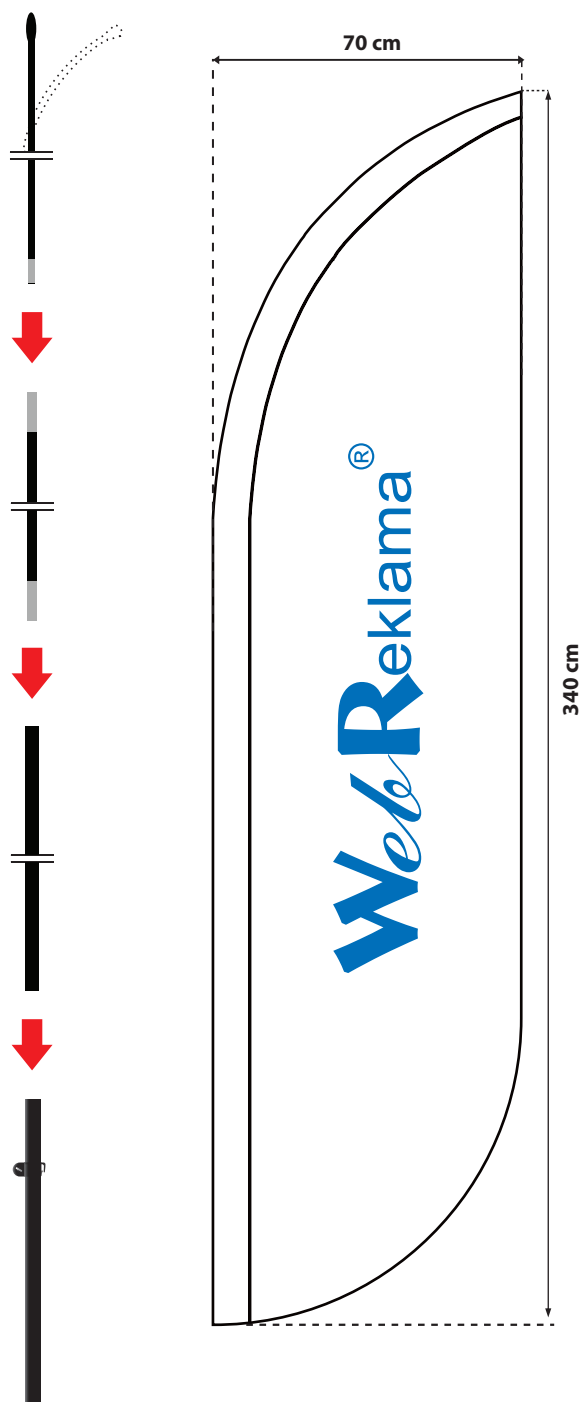

POST-ASSEMBLY VIEW

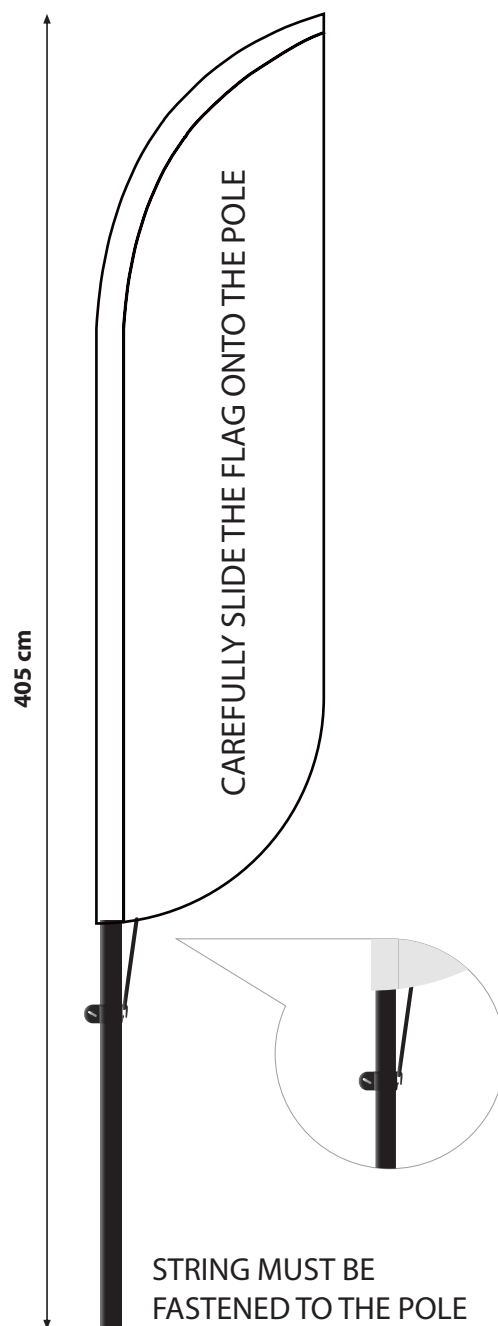

CONDITIONS FOR FLAGPOLE USAGE

Flagpoles are to be secured to an appropriate base; either fixed in place or portable, depending on the surface in such a way as to allow the flag to freely turn with the wind.

Flags should not be exposed to winds surpassing 50 km//h velocity.

FLAG CONSERVATION GUIDELINES



100% POLIESTER

FLAG CARE AND MAINTENANCE INSTRUCTIONS

- The durability of flags may vary depending on exposure to strong winds, the location where they are displayed, and atmospheric pollution, particularly vehicle exhaust fumes. Please remember to properly maintain and care for the printed materials both during display and storage.
- Heavy rain and strong winds may increase the risk of damage to the flag. Once saturated, the material becomes heavier, which can place additional strain on the flagpole and accelerate wear. Strong winds causing the material to flap and pull can lead to tears and abrasions. Therefore, we recommend removing flags from display when wind speeds exceed 50 km/h.
- Please note that the flag must be able to rotate freely in the wind without hitting the flagpole or any other nearby objects in order to prevent damage. Any damage to the material caused in this way should be repaired as soon as possible. Some soiling of the flag caused by atmospheric pollution, particularly vehicle exhaust, is unavoidable. Flags should be cleaned as soon as they become dirty to prevent deep staining. We also recommend washing the flags periodically at a temperature of up to 40°C, using a small amount of standard cleaning detergent that does not contain chlorine.
- Flags should be stored in a dry place whenever they are not on display. If the flags become damp, they should be thoroughly dried before being stored.

SAFETY, COMPLIANCE AND WARNINGS

Safety warnings for outdoor advertising products in accordance with the requirements of Regulation (EU) 2023/988 (GPSR):

- Make sure that the product is properly secured and resistant to weather conditions.
- Regularly inspect the condition of the structure and all fastening components.
- Make sure that the product has no sharp edges or protruding elements. If necessary, secure any areas that may pose a risk of injury.
- Do not install the product in a way that obstructs the visibility of road signs or other infrastructure elements.
- Installation and removal should be carried out by persons with the appropriate qualifications and experience in this type of work.
- Clean the product regularly and carry out periodic technical inspections. The structure should be regularly checked for corrosion, loose connections, and stability.
- Place the product only in locations that are safe for pedestrians and vehicles.
- Avoid locations that may negatively affect the safety of the surrounding area.
- In the event of extreme weather conditions (e.g. hurricanes or severe storms), temporary removal or securing of freestanding outdoor advertising elements is recommended.
- The product is not a toy. Mounting components, ground stakes, and plastic packaging must be kept out of the reach of children (risk of injury or suffocation).